



Additive Calibration Guide



ANSYS, Inc.
Southpointe
2600 ANSYS Drive
Canonsburg, PA 15317
ansysinfo@ansys.com
<http://www.ansys.com>
(T) 724-746-3304
(F) 724-514-9494

Release 2020 R1
January 2020

ANSYS, Inc. and
ANSYS Europe,
Ltd. are UL
registered ISO
9001:2015
companies.

Copyright and Trademark Information

© 2020 ANSYS, Inc. Unauthorized use, distribution or duplication is prohibited.

ANSYS, ANSYS Workbench, AUTODYN, CFX, FLUENT and any and all ANSYS, Inc. brand, product, service and feature names, logos and slogans are registered trademarks or trademarks of ANSYS, Inc. or its subsidiaries located in the United States or other countries. ICEM CFD is a trademark used by ANSYS, Inc. under license. CFX is a trademark of Sony Corporation in Japan. All other brand, product, service and feature names or trademarks are the property of their respective owners. FLEXlm and FLEXnet are trademarks of Flexera Software LLC.

Disclaimer Notice

THIS ANSYS SOFTWARE PRODUCT AND PROGRAM DOCUMENTATION INCLUDE TRADE SECRETS AND ARE CONFIDENTIAL AND PROPRIETARY PRODUCTS OF ANSYS, INC., ITS SUBSIDIARIES, OR LICENSORS. The software products and documentation are furnished by ANSYS, Inc., its subsidiaries, or affiliates under a software license agreement that contains provisions concerning non-disclosure, copying, length and nature of use, compliance with exporting laws, warranties, disclaimers, limitations of liability, and remedies, and other provisions. The software products and documentation may be used, disclosed, transferred, or copied only in accordance with the terms and conditions of that software license agreement.

ANSYS, Inc. and ANSYS Europe, Ltd. are UL registered ISO 9001: 2015 companies.

U.S. Government Rights

For U.S. Government users, except as specifically granted by the ANSYS, Inc. software license agreement, the use, duplication, or disclosure by the United States Government is subject to restrictions stated in the ANSYS, Inc. software license agreement and FAR 12.212 (for non-DOD licenses).

Third-Party Software

See the [legal information](#) in the product help files for the complete Legal Notice for ANSYS proprietary software and third-party software. If you are unable to access the Legal Notice, contact ANSYS, Inc.

Published in the U.S.A.

Table of Contents

Introduction 1

Cantilever Beam Geometry 5

Building the Parts 7

Taking Distortion Measurements 11

Running the Simulations 15

Using the Spreadsheet to Calculate SSF and ASCs 27

Saving Your Final Results as Custom Materials 33

A. Equations for Calculating SSF and ASCs 35

List of Figures

1. SSF required for Assumed Strain simulations in Additive Print	1
2. SSF and ASCs required for Scan Pattern and/or Thermal Strain simulations in Additive Print	2
3. Cantilever beam dimensions	5
4. Cantilever beam with support	5
5. Scan pattern 1 (0°, 0°)	8
6. Scan pattern 2 (90°, 0°)	8
7. Scan pattern 3 (rotating stripe)	9
8. Measurement location A	11
9. Measurement location B	12
10. Workflow diagram for obtaining distortion simulation values, measurements A and B	16
11. Selected points on support (left) and on cantilever beam part (right) along measurement A	17
12. Selected points on cantilever beam along measurement B after cutoff	17
13. Example of how to use Paraview to find displacement value for measurement B	18
14. Point highlighted after using the "Find Data" query	18
15. Files for transfer to ANSYS Mechanical	19
16. ANSYS Workbench/Mechanical setup steps 1-3	20
17. ANSYS Workbench/Mechanical setup steps 4-6	20
18. ANSYS Workbench/Mechanical setup steps 7-10	21
19. ANSYS Workbench/Mechanical setup steps 11-12	21
20. ANSYS Workbench/Mechanical setup steps 13-14	22
21. ANSYS Workbench/Mechanical setup step 15	23
22. ANSYS Workbench/Mechanical setup steps 16-17	23
23. Workbench/Mechanical setup steps 18-22	24
24. ANSYS Workbench/Mechanical setup steps 23-24	24
25. ANSYS Workbench/Mechanical setup step 25	25

List of Tables

1. Complete matrix of SSF and ASCs 3

2. Variables 35

3. Subscripts 35

Introduction

Objective

The objective of this Calibration Guide is to establish a procedure that you can follow to determine the Strain Scaling Factor (SSF) and Anisotropic Strain Coefficients (ASCs) for use in the ANSYS Additive Print software. The calibrated SSFs and ASCs will significantly improve the prediction accuracy of the simulation software, therefore improving the chance of successful builds as well as reducing the cost of trial and error experiments.

Figure 1: SSF required for Assumed Strain simulations in Additive Print

The screenshot shows the ANSYS Material Configuration window. The left sidebar contains navigation icons for Dashboard, Parts, Build Files, and Materials. The main area is titled 'Material Configuration'. At the top, the 'Material *' dropdown menu is set to 'IN718', which is circled in red. Below this, a note states: 'Selecting a new material will override the material properties with material defaults'. The configuration fields are as follows:

Property	Value
Stress Mode	Linear Elastic
Elastic Modulus (GPa) *	211
Poisson Ratio *	0.3
Yield Strength (MPa) *	1040
Strain Scaling Factor *	1

The 'Strain Scaling Factor *' field is highlighted with a red rectangular box. A red arrow points from the text 'SSF that will be determined by the calibration procedure' to this field.

Figure 2: SSF and ASCs required for Scan Pattern and/or Thermal Strain simulations in Additive Print

ANSYS

Material Configuration

Material *
IN718

Selecting a new material will override the material properties with material defaults

Stress Mode: Linear Elastic

Elastic Modulus (GPa) *: 211

Poisson Ratio *: 0.3

Yield Strength (MPa) *: 1040

Strain Scaling Factor *: 1

Anisotropic Strain Coefficients (||) *: 1.5

Anisotropic Strain Coefficients (⊥) *: 0.5

Anisotropic Strain Coefficients (Z) *: 1

SSF and ASCs that will be determined by the calibration procedure

Procedure

The calibration procedure consists of building parts, taking measurements, running simulations, and calculating factors using a spreadsheet. You will start by building three identical parts using a different scan pattern for each. You'll determine an initial set of SSF and ASC values using the first two scan patterns, and then fine-tune the values with the third scan pattern. Our experience shows that the third scan pattern calibration step increases the accuracy of simulations for user-preferred scan patterns. We *strongly* recommend the fine-tuning step that uses the third scan pattern.

Here is the overall procedure:

1. Build all calibration parts on the same build plate

For convenience, we recommend building all the parts on the same build plate. Use the same part for all calibration steps but use a different scan pattern for each. The dimensions of the part may be adjusted depending on the material, machine, and process parameters to achieve a successful build. The procedure remains the same regardless of part dimensions. More details are available in [Building the Parts \(p. 7\)](#).

2. Measure the dimensions of the built parts to determine distortion

Using the best measurement method available, measure the dimensions of the parts at the recommended locations of interest. Record the dimension measurements in the ANSYS-provided spreadsheet and distortions at those locations will automatically be calculated. More details are available in [Taking Distortion Measurements \(p. 11\)](#).

3. Run calibration to determine an initial set of factors (for each simulation type and stress mode combination)

For a chosen combination of simulation type and stress mode, run simulations of the calibration part in Additive Print (and ANSYS Workbench if choosing in support-only cutoff under J2 plasticity mode). Use the spreadsheet provided to calculate factors based on a distortion average

from the first two scan patterns. More details are available in [Running the Simulations \(p. 15\)](#) and [Using the Spreadsheet to Calculate SSF and ASCs \(p. 27\)](#).

4. Run fine-tuning calibration step with a different scan pattern

For the same combination of simulation type and stress mode, run simulations with the newly calibrated factors and use the spreadsheet to fine-tune the factors based on distortion from the third scan pattern.

When to Calibrate

The values for SSF and ASCs depend upon the following:

- Material
- Machine
- Machine parameters (laser power, scan speed, layer thickness, baseplate temperature, hatch spacing, slicing stripe width, scan pattern, etc.)
- Simulation type performed (Assumed Strain, Scan Pattern, or Thermal Strain)
- Stress mode selected (linear elastic or J2 plasticity)

Assuming you perform the full procedure, for each calibration you will have a complete set of values to be used for any simulation type/stress mode *for a given material and machine*. When a different material or machine is chosen, the ASC and SSF values will need to be recalibrated, regardless of the simulation type or stress mode. Even changing the material *supplier* for a material you have already calibrated for may require a new calibration. If the process parameters are altered, Assumed Strain and Scan Pattern-based simulations will need to be recalibrated.

Important:

You need to calibrate only for the type of simulation you will be performing. For example, if you know you will be performing Assumed Strain simulations only, you don't need to build multiple calibration parts because scan pattern doesn't matter and you don't need to complete the calculations for ASCs, as those factors are required only for Scan Pattern and Thermal Strain simulation types. Within your Assumed Strain simulations, if you know you will be using linear elastic stress mode only, there is no need to calibrate for J2 plasticity. See the ANSYS Additive User's Guide for further information about simulation types and stress modes.

Matrix of SSF and ASCs

Table 1 shows a complete matrix across different simulation types and stress modes for a certain material, A. After the full calibration process, you will record final values in the color-filled fields that are unique to that material and machine.

Table 1: Complete matrix of SSF and ASCs

Material	Stress Mode	Assumed Strain	Scan Pattern	Thermal Strain
A	Linear Elastic	SSF	SSF	SSF
			ASC	ASC

Material	Stress Mode	Assumed Strain		Scan Pattern		Thermal Strain	
				ASC \perp		ASC \perp	
				ASC_z	1	ASC_z	1
	J2 Plasticity	SSF		SSF		SSF	
				ASC		ASC	
				ASC \perp		ASC \perp	
				ASC_z	1	ASC_z	1

Cantilever Beam Geometry

Geometry files of a **cantilever beam** part and its support, in .stl format, are [available for download](#).

The part dimensions (50 x 10 x 12.5 mm) are shown in [Figure 3 \(p. 5\)](#). The part and its support are shown together in [Figure 4 \(p. 5\)](#). The red dashed line represents the support cutoff location.

Figure 3: Cantilever beam dimensions


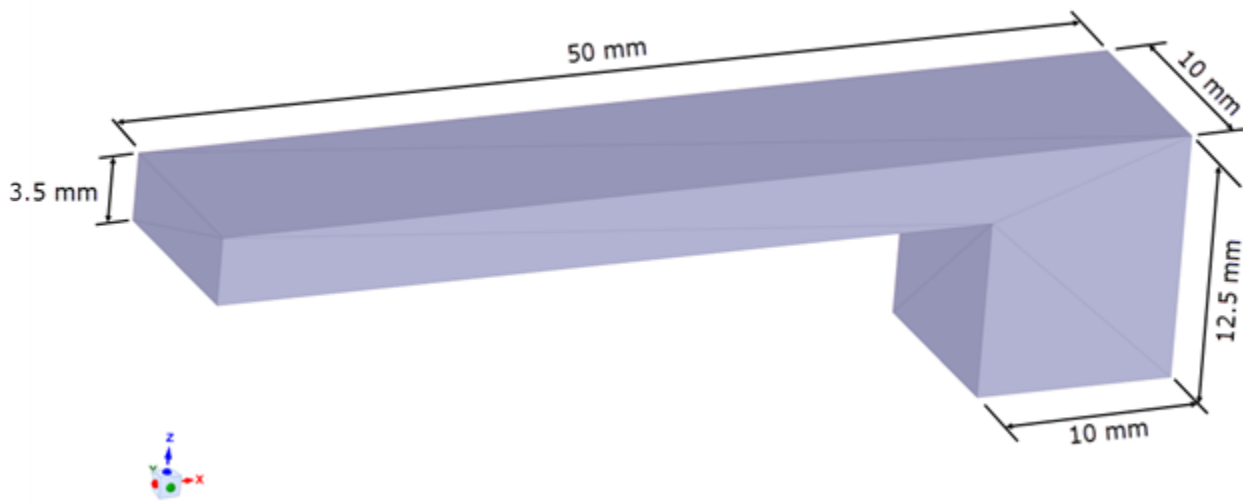


Figure 4: Cantilever beam with support

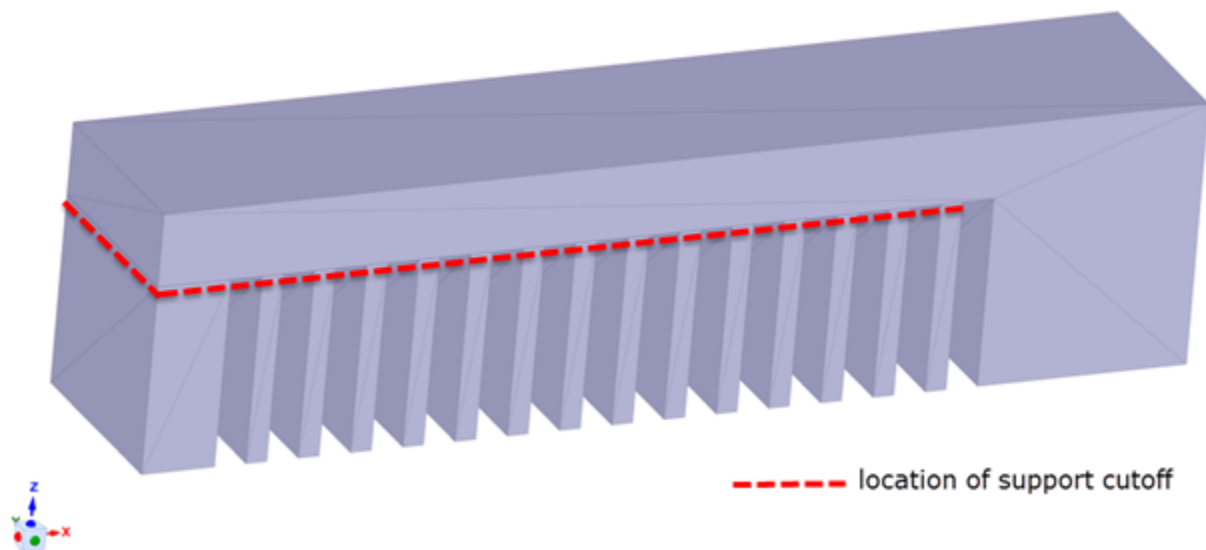

Building the Parts

Part Layout

We recommend you *build the calibration parts on the same build*. There will be three cantilever beam parts, each with a different scan pattern. The three calibration parts differ only in scan pattern. (If you will be doing Assumed Strain simulations only, then only one part is needed and use the rotating stripe scan pattern.)

Implement an appropriate layout consistent with the best practice for taking gas flow direction into account. Ensure there is enough space between the parts to take measurements *before the parts are cut from the baseplate*. The parts need to be measured while they are fixed to the plate; hence, it is important to keep enough space between neighboring parts.

Support Structure

The support structure of the cantilever beam is provided; the parts should be built on the baseplate directly.

Process Parameters

With the exception of the scan patterns that are described below, the parts should be built with the process parameters (laser power, scan speed, etc.) that you are intending to use for building your real components. Make sure to use the same build parameters and scan patterns for both the part and the supports.

Scan Patterns

Build the calibration parts with the scan patterns as shown in the following figures. (For Assumed Strain simulations, only scan pattern 3 is needed.)

- Scan pattern 1: bi-directional scan with 0° starting angle and 0° layer rotation angle, scan line is either 0° or 180°. See [Figure 5 \(p. 8\)](#).
- Scan pattern 2: bi-directional scan with 90° starting angle and 0° layer rotation angle, scan line is either 90° or 270°. See [Figure 6 \(p. 8\)](#)
- Scan pattern 3: use the scan pattern that you are intending to use for building real components. In this guide we use a rotating stripe scan pattern with a 0° starting angle and a 67° rotation angle. See [Figure 7 \(p. 9\)](#)
- There should be no extra scans such as contour scan, up-skin and down-skin, shrinkage factor, etc.

Figure 5: Scan pattern 1 ($0^\circ, 0^\circ$)

Scan Pattern 1 ($0,0$)

- Black arrows denote *laser* scan vectors
- Gold arrow denotes *stripe* scan direction

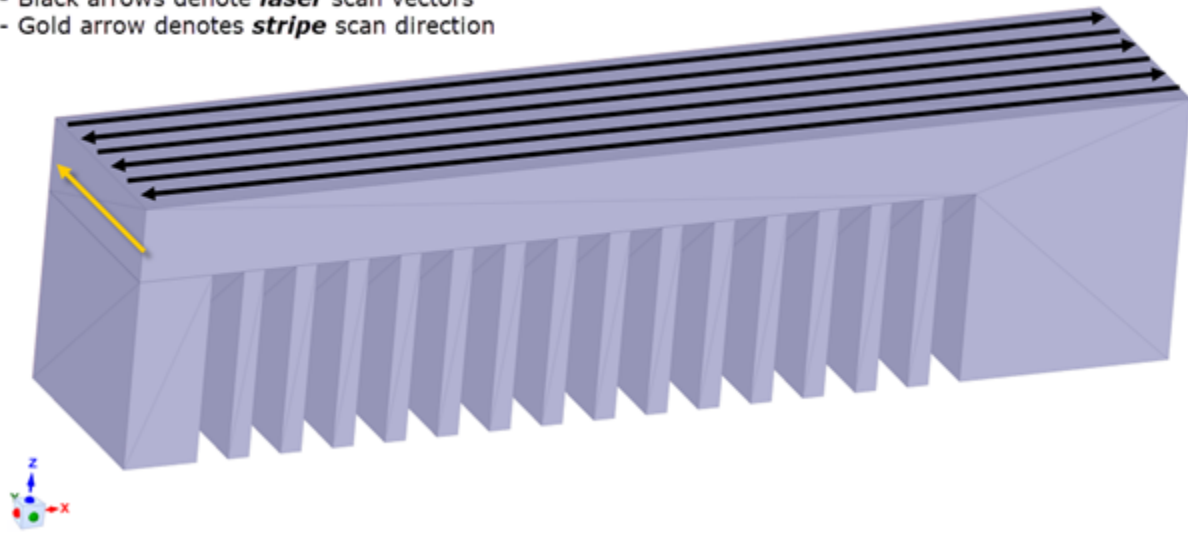


Figure 6: Scan pattern 2 ($90^\circ, 0^\circ$)

Scan Pattern 2 ($90,0$)

- Black arrows denote *laser* scan vectors
- Gold arrow denotes *stripe* scan direction


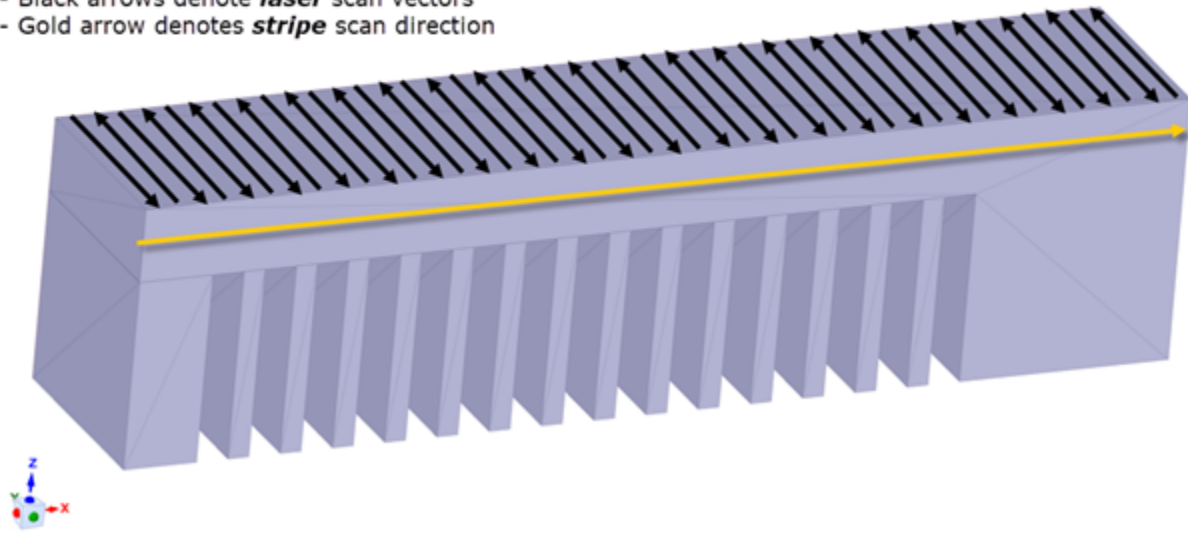


Figure 7: Scan pattern 3 (rotating stripe)

Scan Pattern 3 (rotating stripe)

- Black arrows denote **laser** scan vectors
- Gold arrow denotes **stripe** scan direction

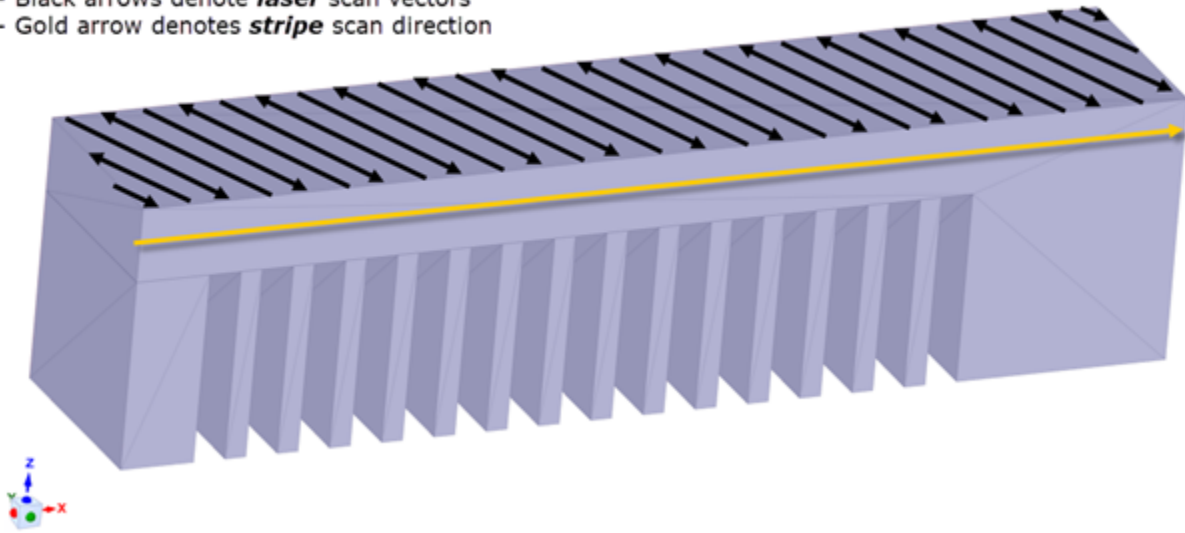

Important:

Pay attention to the legend in [Figure 5 \(p. 8\)](#) and [Figure 6 \(p. 8\)](#). The angles refer to the direction of the laser, not the stripe direction. The X-axis in this guide always runs parallel to the length of the cantilever. Should your machine use a different coordinate system, make sure that scan pattern 1 ($0^\circ, 0^\circ$) results in the laser scanning parallel to the length of the cantilever. In order to achieve this, it may be necessary to set the stripe width to the length of the cantilever (50 mm) or more.

For scan pattern 2 ($90^\circ, 0^\circ$), the stripe width may need to be set to the width of the cantilever (10 mm) or more.

Taking Distortion Measurements

Measurement Locations

Measurement locations are shown in the following figures.

- Measurement A is along the center line of the cantilevered edge face ($Y=5$, $X=0$ mm) before cutting off the support, as shown in [Figure 8 \(p. 11\)](#). This is the default measurement location.
- Measurement B is along the center line on the top surface of the cantilever beam ($Y=5$ mm, $Z=12.5$ mm) after cutting off the support, as shown in [Figure 9 \(p. 12\)](#). This is an optional measurement location.

Figure 8: Measurement location A

Measurement A

- Along center line of cantilevered edge face ($Y=5$ mm)
- Before support cutoff
- X component of displacement is of interest


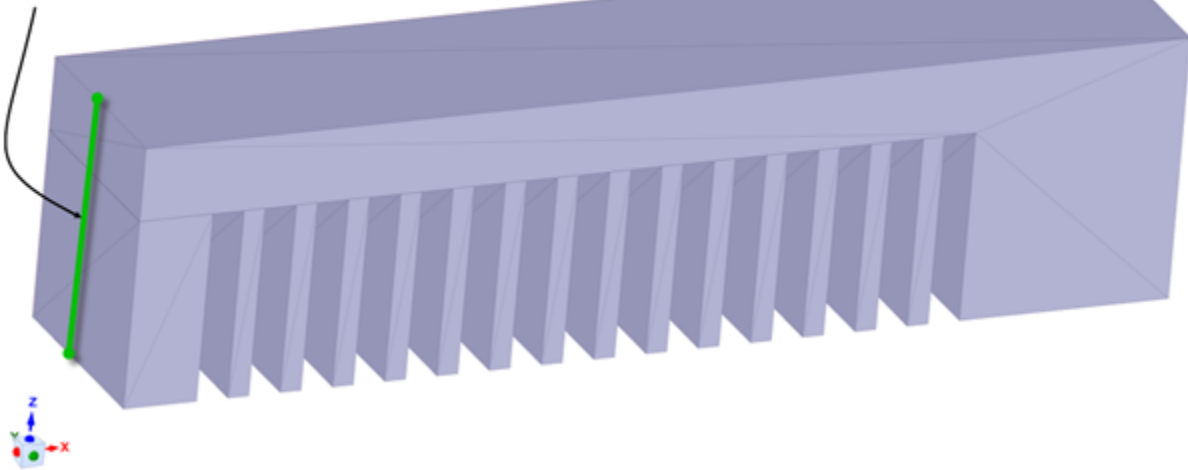


Figure 9: Measurement location B**Measurement B**

- Along center line of top face ($Y=5\text{ mm}$)
- After support cutoff
- Z component of distortion is of interest

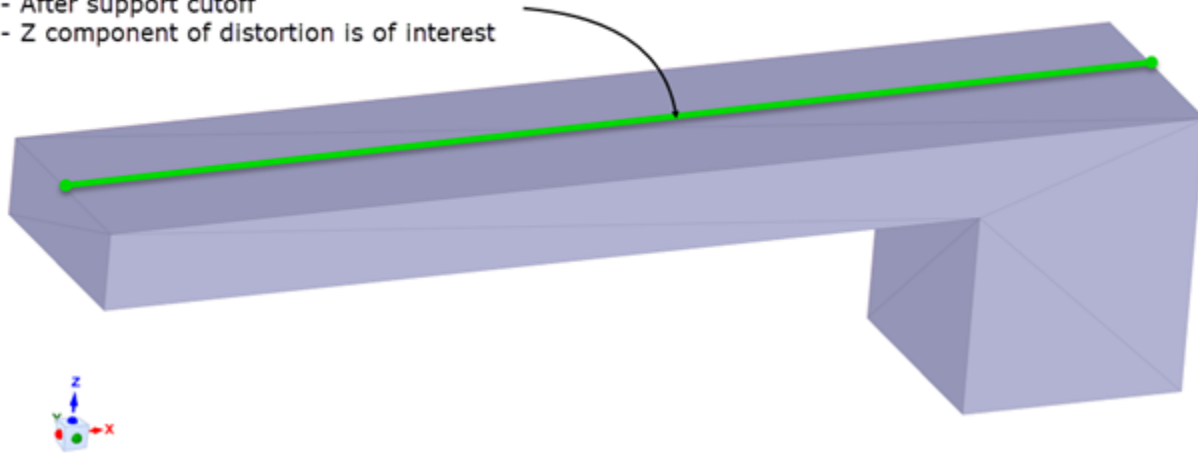

Our experience has shown that measurement A may be a little difficult to measure. This is why we provide an alternative measurement location, B. Measurement A is usually more sensitive to SSF, however.

If you use a different geometry instead of the cantilever beam, choose one measurable location of interest based on the geometry to perform the calibration.

Measurement Methods

Several measurement methods are available and described below. Choose a measurement technique with the best resolution available.

CMM

If using a Coordinate Measurement Method (CMM), measure many points in a line along the chosen surface of the cantilever beam. Find the maximum deflection for the measurement location(s).

- The maximum X-deflection for measurement A (see [Figure 8 \(p. 11\)](#)) will generally occur at the interface between the beam and the supports, but we recommend comparing measurements along the height.
- The maximum Z-deflection for measurement B (see [Figure 9 \(p. 12\)](#)) will generally occur at the cantilevered end of the beam, but we recommend comparing measurements across the top surface.

Record the value of the dimensions on the spreadsheet provided by ANSYS.

Laser Scanner

If using a laser scanner, point cloud or scanned STL file can be obtained. Measure distortion at the X and Z locations of interest.

Caliper/Micrometer and a Digital Height Gage

If using a caliper/micrometer, we recommend using calipers with fine detail extensions and a digital height gage to mark the height. Measure the dimension of the cantilever beam at the location of interest. This measurement technique is less accurate than the other methods and may result in inaccurate distortion, SSF, and ASC values. Therefore, this is the least preferred measurement method.

As a last resort, if you do not have a digital height gage, you may want to consider modifying the .stl file to include detents at the location of interest and then use this modified geometry in your simulations.

Running the Simulations

In Additive Print, keep the following settings consistent for all simulations:

- Cantilever beam part ([Cantilever_ANSYS_part.stl](#))
- Cantilever beam support ([Cantilever_ANSYS_support.stl](#))
- Voxel size: 0.25 mm (This is a suggested value, it can be modified but should be kept consistent throughout all simulations. We recommend you use the voxel size that you will be using for your own part.)
- Material properties, either from an ANSYS-predefined material or your customized material
- Process parameters (needed for Scan Pattern and Thermal Strain simulations)

Use the default output options for measurement A. For measurement B, choose "Displacement after cutoff" and specify the "Support-only Cutoff" option from the drop-down.

Note:

When obtaining the support-only cutoff value for measurement B in J2 plasticity mode, ANSYS Workbench/Mechanical will also need to be employed to capture the distortion and account for its value from the support cutoff process. ANSYS Workbench/Mechanical is not required for simulations using linear elastic mode or on-plate distortion simulations using J2 plasticity mode.

Additive Print allows you to prepare multiple simulations and queue them up to automatically run one after another.

Simulations with the First Two Scan Patterns

Scan Pattern/Thermal Strain:

- Start with the default $SSF_0 = 1$
- Start with default ASC_0 (1.5, 0.5, 1)
- Scan pattern 1 – use 0° starting angle and 0° layer rotation angle
- Scan pattern 2 – use 90° starting angle and 0° layer rotation angle

Simulations with the Third Scan Pattern (Fine-tuning Step)

Assumed Strain:

- For both linear elastic and J2 plasticity, start with the $SSF_0 = 1$


Scan Pattern/Thermal Strain:

- For both linear elastic and J2 plasticity, start with the calibrated SSF
- Use the calibrated ASCs
- Machine Configuration - Use the scan pattern angles you used to build the third part (such as scan pattern 3 as shown in [Figure 7 \(p. 9\)](#)).

Extracting Distortion Data

Figure 10: Workflow diagram for obtaining distortion simulation values, measurements A and B (p. 16) shows a diagram of the procedure for obtaining distortion data, measurement A and measurement B. These measurements are required input values used in the [ANSYS Additive Calibration spreadsheet](#) to calculate the Strain Scaling Factor (SSF) and the Anisotropic Strain Coefficients (ASCs). See [Figure 9: Measurement location B \(p. 12\)](#) for detailed instructions on using the Calibration spreadsheet.

Figure 10: Workflow diagram for obtaining distortion simulation values, measurements A and B

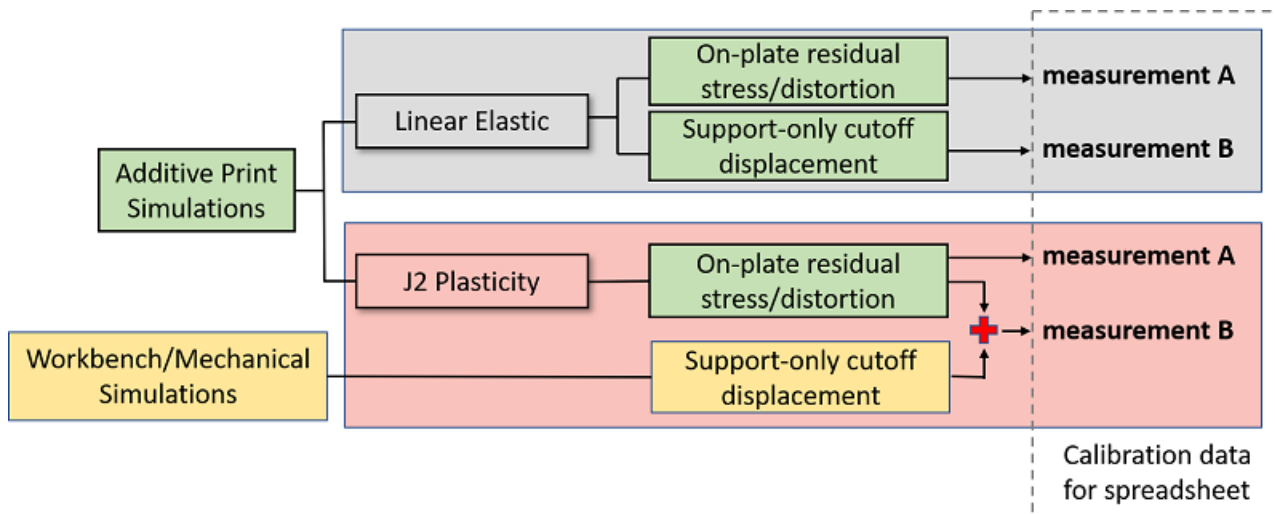**Measurement A**

For simulation of measurement A, use the **On-plate residual stress/distortion** results to extract the directional component of displacement at the ends of the cantilever beam at the location of interest, Measurement A. Use either the ANSYS viewer in Additive Print to view the results (hover the mouse over the location of interest to get the displacement) or export the files to view in another viewer application.

Measurement B

Linear Elastic Mode

For simulation of measurement B in linear elastic mode, use the **Displacement after cutoff > Support-only Cutoff** results to extract the displacement in the Z direction along measurement B.

Note:

Locations of data extraction from the simulations should match the measurement locations.

Figure 11: Selected points on support (left) and on cantilever beam part (right) along measurement A


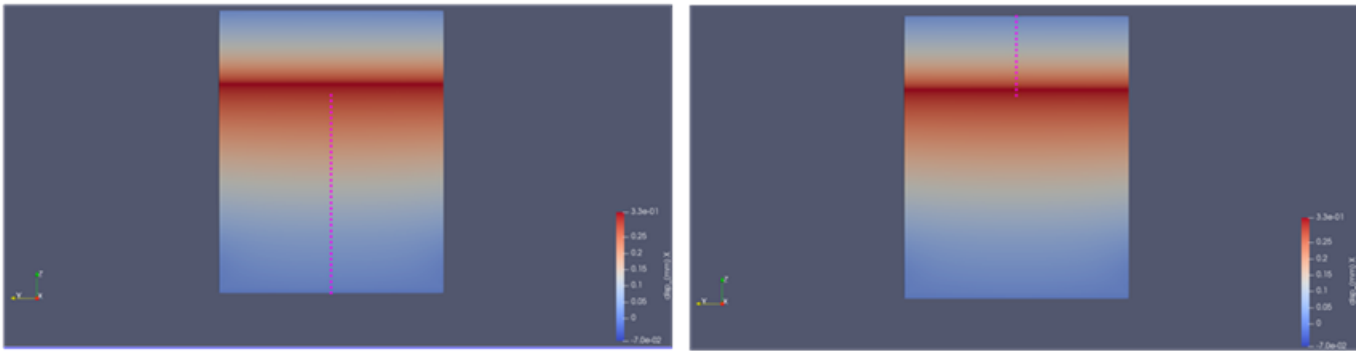


Figure 12: Selected points on cantilever beam along measurement B after cutoff

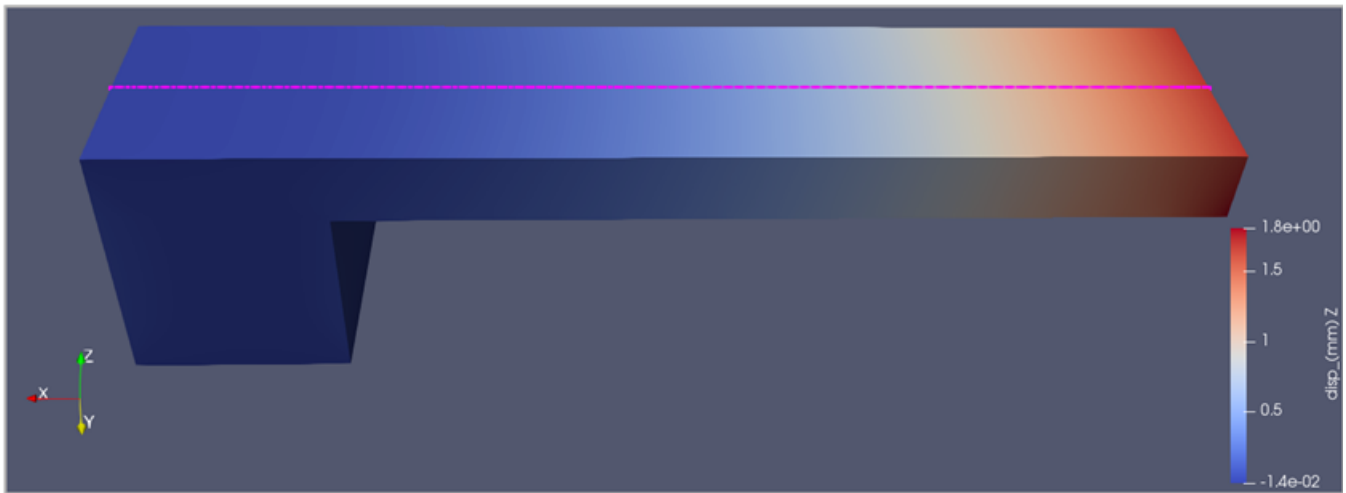

The data point coordinates at the locations of interest, as shown in Figures 8 (p. 11) and 9 (p. 12), are:

- Measurement A: (0, 5, 8.5) to (0, 5, 12.5) Use X-displacement value
- Measurement B: (0, 5, 12.5) to (50, 5, 12.5) Use Z-displacement value

The distortion on measurement A is the maximum X-displacement value.

The distortion on measurement B is the maximum Z-displacement value at X = 50 mm.

Paraview is an open-source, multi-platform data analysis and visualization application. Within Paraview, extract the distortion data by doing the following:

Open the appropriate files and make it active.

Edit > Find Data...

Figure 13: Example of how to use Paraview to find displacement value for measurement B


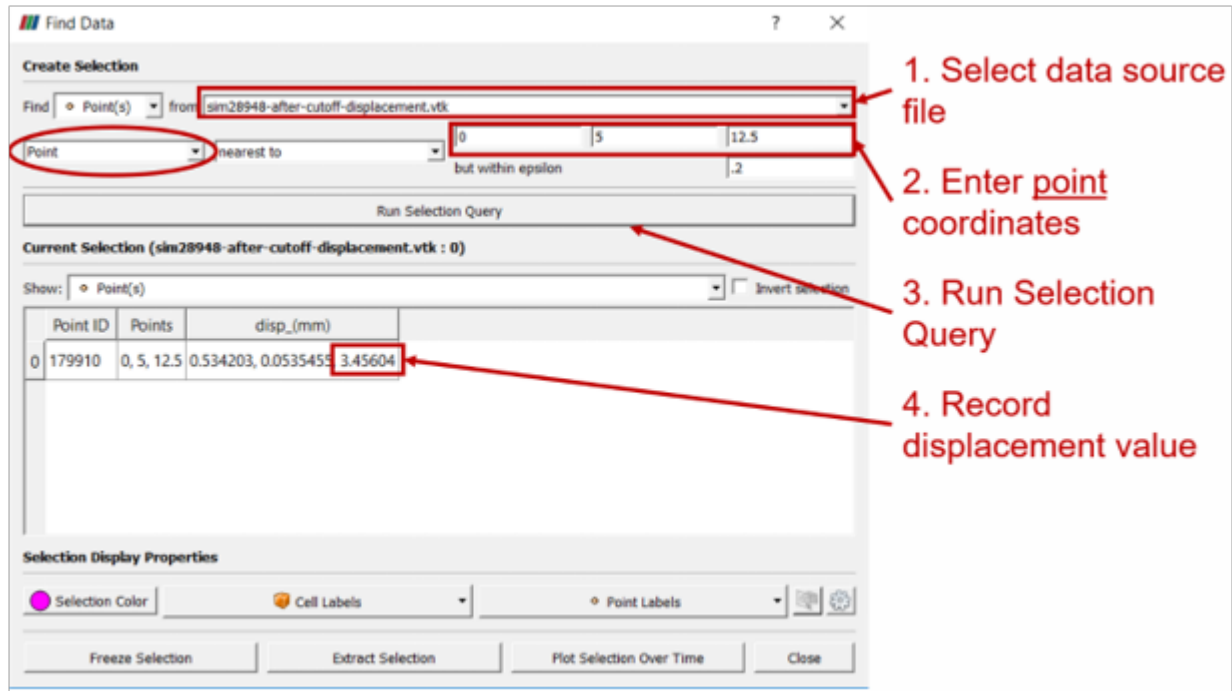


Figure 14: Point highlighted after using the "Find Data" query

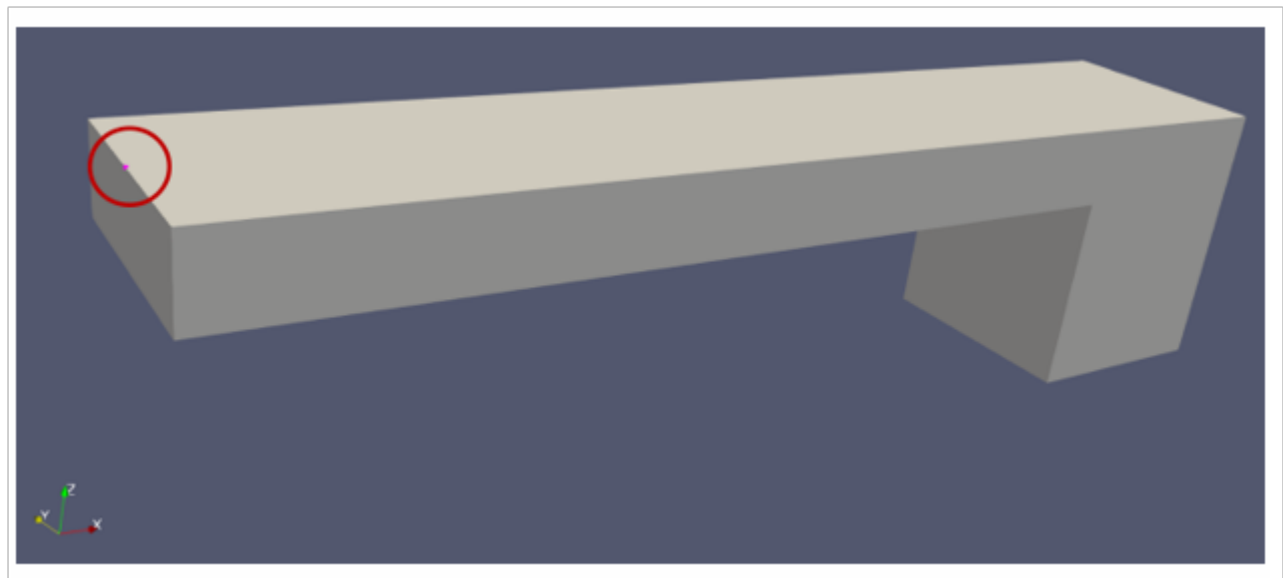


J2 plasticity mode

For simulation of measurement B in J2 plasticity mode, there are two components: **On-plate stress/displacement** and **Support-only cutoff stress/displacement**. **On-plate stress/displacement** is obtained from Additive Print at the location defined in [Figure 12: Selected points on cantilever beam along measurement B after cutoff \(p. 17\)](#) followed by the procedure described above using Paraview. **Support-only cutoff stress/displacement** is obtained from ANSYS workbench at the same location (delineated in [Figure 12: Selected points on cantilever beam along measurement B after cutoff \(p. 17\)](#)). The sum of these two simulation stress/displacement values are the final values that will be used in the calibration spreadsheet.

When setting up the Additive Print for J2 plasticity mode **Support-only cutoff simulation**, make sure to check the **Files for transfer to ANSYS Mechanical** option in the Outputs section. Once the simulation is completed, export and unzip this file. Four different files are saved within the folder, as shown in [Figure 15: Files for transfer to ANSYS Mechanical \(p. 19\)](#). You do not need to check the **Displacement after cutoff** option since this data will not be used for calibration for this particular scenario.

Figure 15: Files for transfer to ANSYS Mechanical

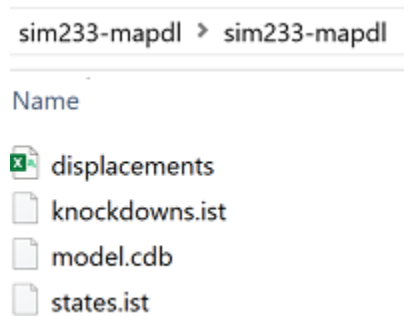

The contents of these files are as follows:


`displacements.csv` contains cantilever displacement values generated in Additive Print.

`knockdowns.ist` contains knockdown factors for the entire part.


`model.cdb` contains material properties, part/support geometry information, and boundary conditions.

`states.ist` contains strain information generated in Additive Print.

The procedure for using ANSYS Workbench/Mechanical to obtain the Support-only cutoff displacement value needed to calculate measurement B (see [Figure 10: Workflow diagram for obtaining distortion simulation values, measurements A and B \(p. 16\)](#)) is divided into 25 steps described in detail here. Open ANSYS Workbench, and perform the first three steps, illustrated in [Figure 16: ANSYS Workbench/Mechanical setup steps 1-3 \(p. 20\)](#). Drag an External Model module from Component Systems and a Static Structural module from Analysis Systems to the Project Schematic layout (steps 1 and 2). Link Setup in External Model to Engineering Data and Model in Static Structural, respectively (step 3).

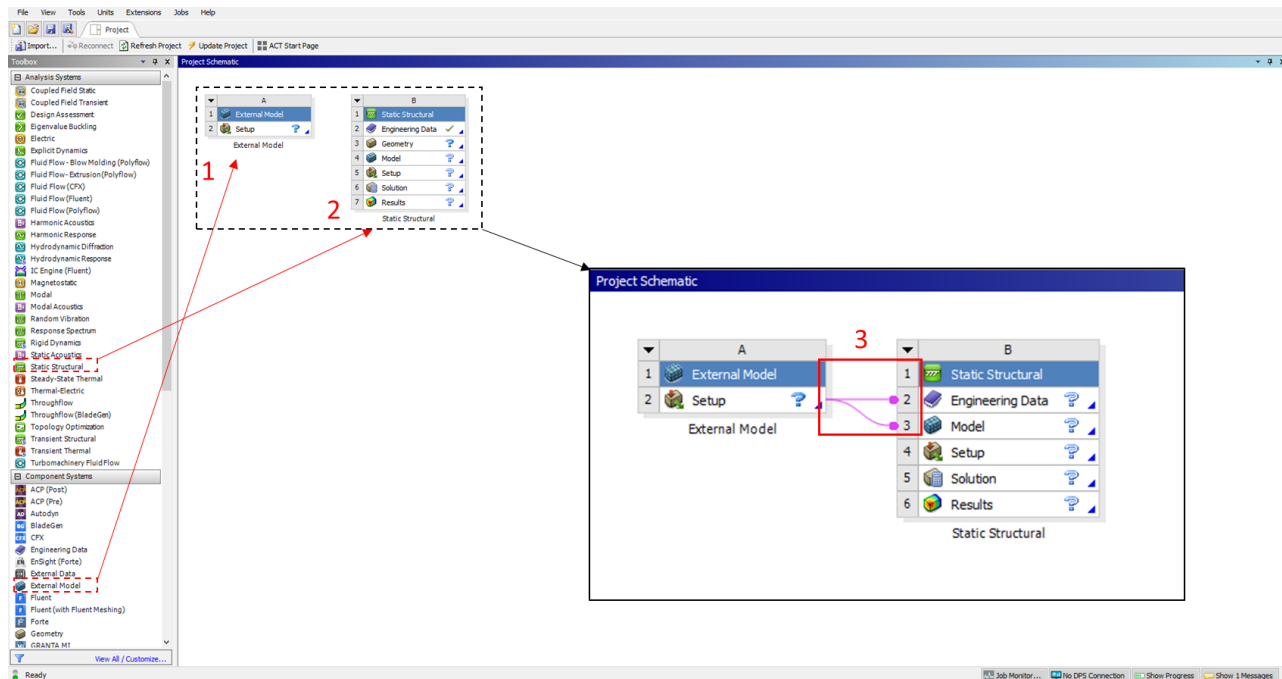
Figure 16: ANSYS Workbench/Mechanical setup steps 1-3

Right click Setup and choose **Edit...** in the External Model module to open a new tab, A: External Model. (step 4 in [Figure 17: ANSYS Workbench/Mechanical setup steps 4-6 \(p. 20\)](#)). In the A: External Model tab, click ... under location (step 5) to select import the model1.cdb file saved in the files for transfer to ANSYS mechanical folder (step 6).

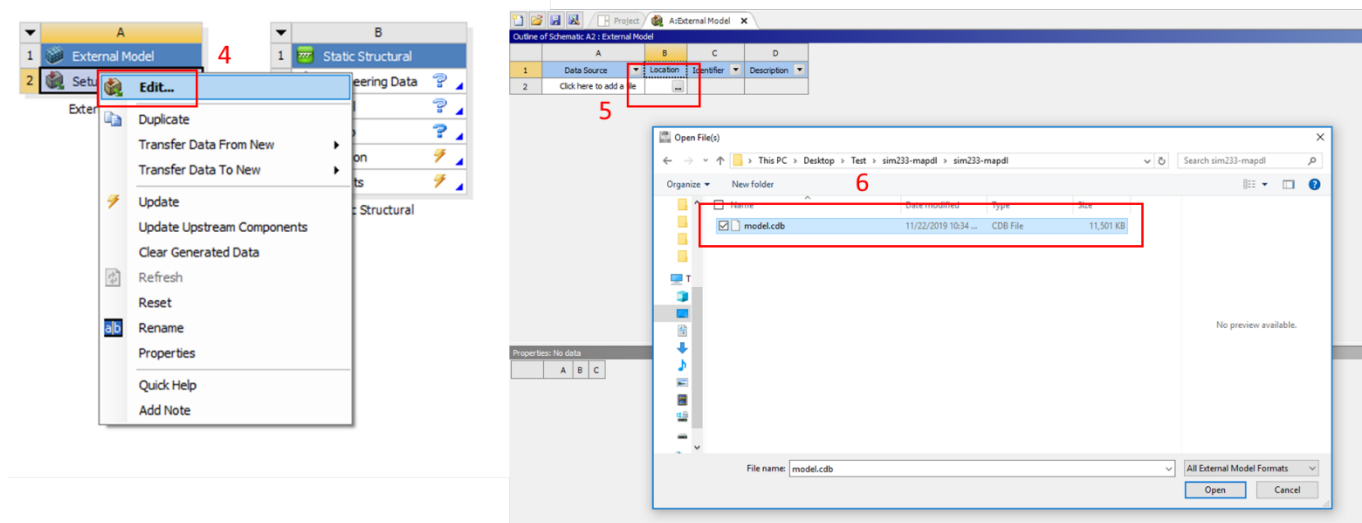Figure 17: ANSYS Workbench/Mechanical setup steps 4-6


The next steps are shown in [Figure 18: ANSYS Workbench/Mechanical setup steps 7-10 \(p. 21\)](#). Click the Project tab to return to the Project Schematic page (step 7), right click the Setup cell in the External Model module (step 8), choose **Update** from the drop-down menu, and wait until the question mark on Setup becomes a green check mark (step 9). Repeat this updating procedure (right click and select **Update**) for the Engineering Data and Model cells in the Static Structural module, respectively (step 10). Green check marks will be displayed beside each cell, indicating that they have properly updated.

Figure 18: ANSYS Workbench/Mechanical setup steps 7-10

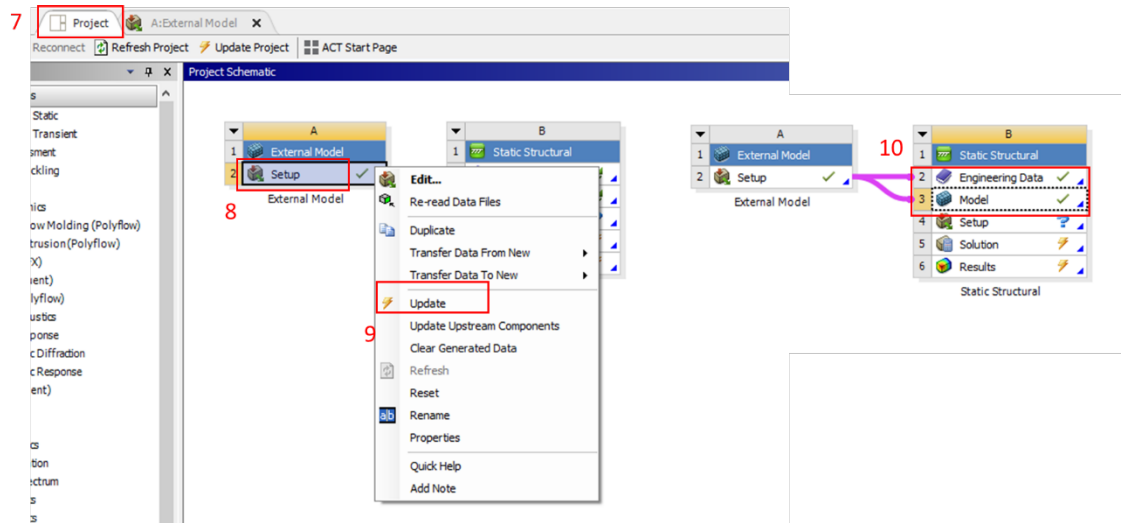


Double-click the Model cell in Static Structural to run ANSYS Mechanical. The ANSYS Mechanical application window is shown in [Figure 19: ANSYS Workbench/Mechanical setup steps 11-12 \(p. 21\)](#). Click the **Geometry** object in the tree in the Outline pane to access the Details of "Geometry" pane (step 11). Change the Element Control in the Details view from Program Controlled to Manual (Step 12).

Figure 19: ANSYS Workbench/Mechanical setup steps 11-12

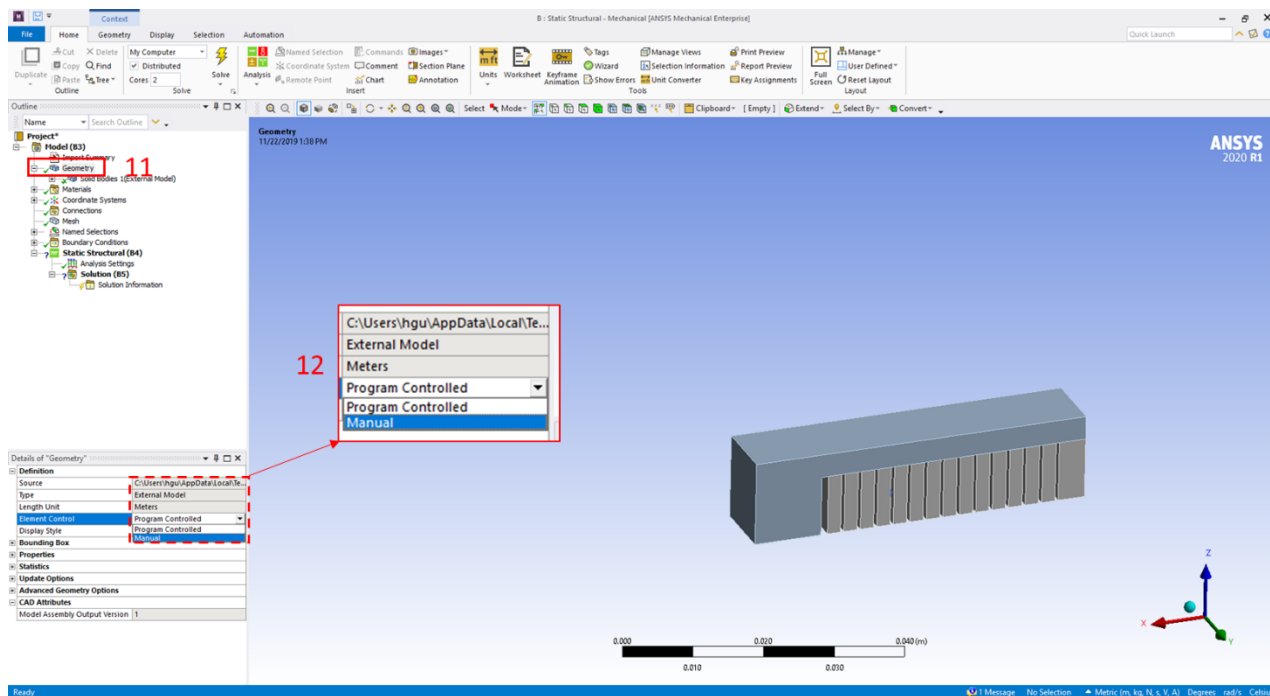

[Figure 20: ANSYS Workbench/Mechanical setup steps 13-14 \(p. 22\)](#) illustrates the next steps. To activate the command window where you will set up the support-only cutoff process using MAPDL commands, right click Static Structural in the Outline pane (step 13), and choose **Insert > Commands** (step 14).

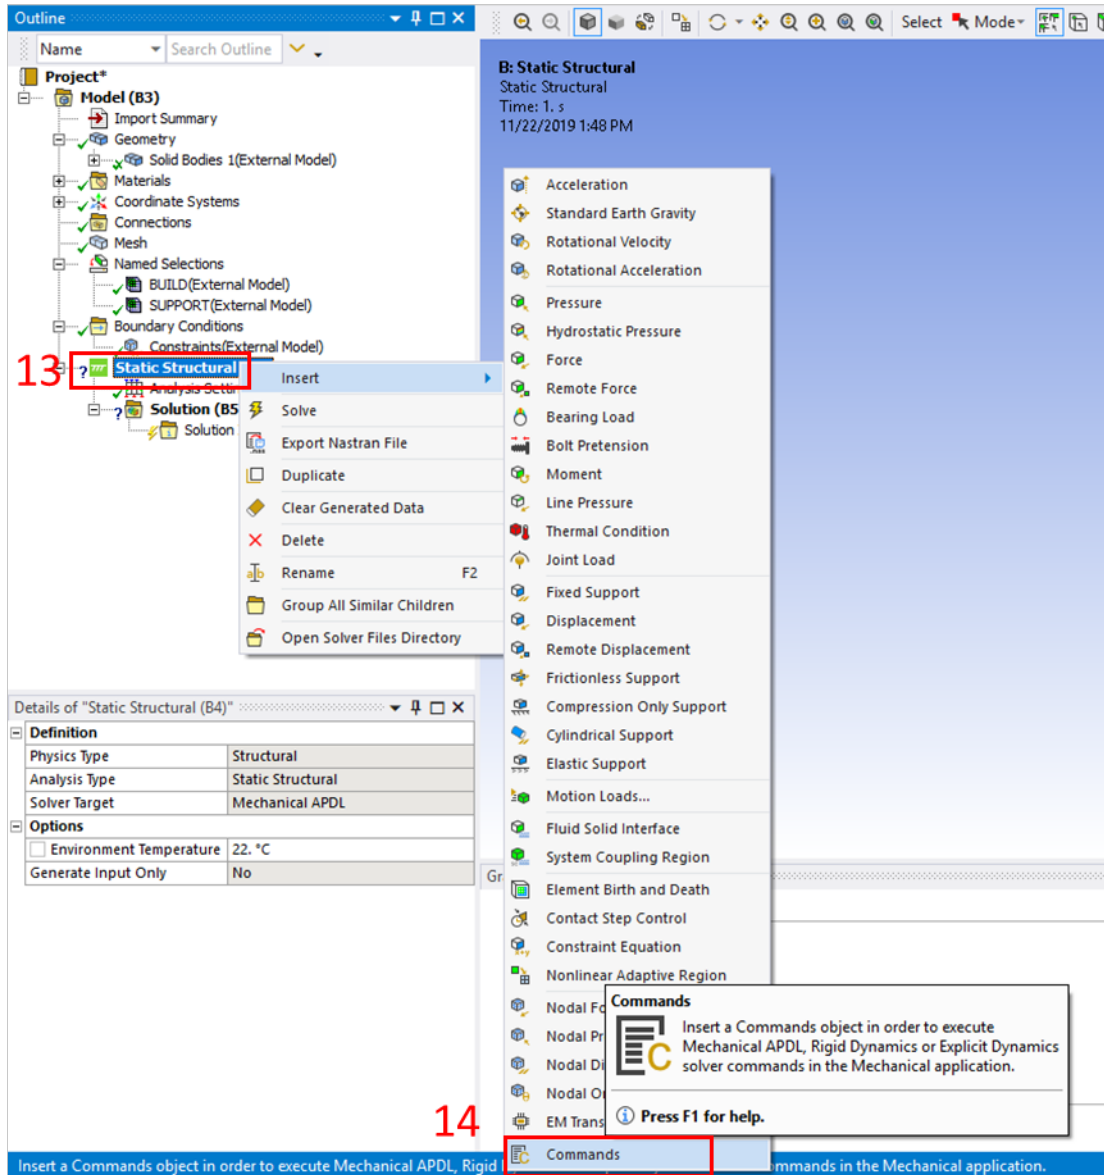Figure 20: ANSYS Workbench/Mechanical setup steps 13-14

In the command window, type in the following commands; see also Figure 21: ANSYS Workbench/Mechanical setup step 15 (p. 23).

```


INISTATE,read,states,ist,C:/Users/ANSYS/Desktop/Test/sim233-mapdl/sim233-mapd      !load states.ist file
INISTATE,list,1                                                                !remove potential errors
INISTATE,read,knockdowns,ist,C:/Users/ANSYS/Desktop/Test/sim233-mapdl/sim233-mapd !load knockdowns.ist file

SOLVE                                                                    !solve model
CMSEL,s,support_external_model_                                           !select support named selection
EKILL,all                                                                !kill current selection
ALLSEL                                                                    !select all elements
SOLVE                                                                    !solve the updated model

```

Be sure to input correct file path to the files `states.ist` and `knockdowns.ist` saved within the files for transfer to ANSYS mechanical folder. (Change the file path in the example commands above, `C:/Users/ANSYS/Desktop/Test/sim233-mapdl/sim233-mapd`, to the correct file path.)

Figure 21: ANSYS Workbench/Mechanical setup step 15

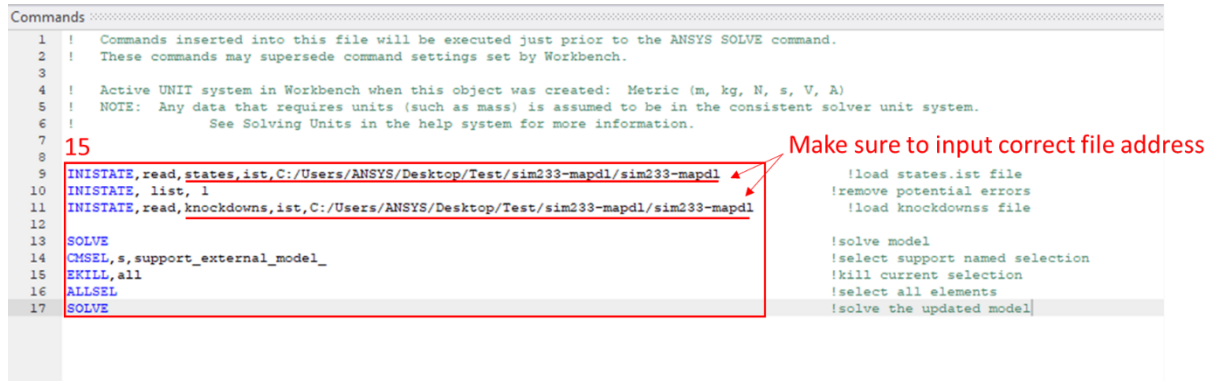

Click the button highlighted in Figure 22: ANSYS Workbench/Mechanical setup steps 16-17 (p. 23) to show nodes on the cantilever geometry (step 16). Then, click the node located at the correct location to extract distortion data (step 17). Make sure that the node is correctly chosen by checking the exact location coordination information shown at the bottom status bar, Location = (0., 5.e-003, 1.25e-002) m, as shown in Figure 22: ANSYS Workbench/Mechanical setup steps 16-17 (p. 23).

Figure 22: ANSYS Workbench/Mechanical setup steps 16-17

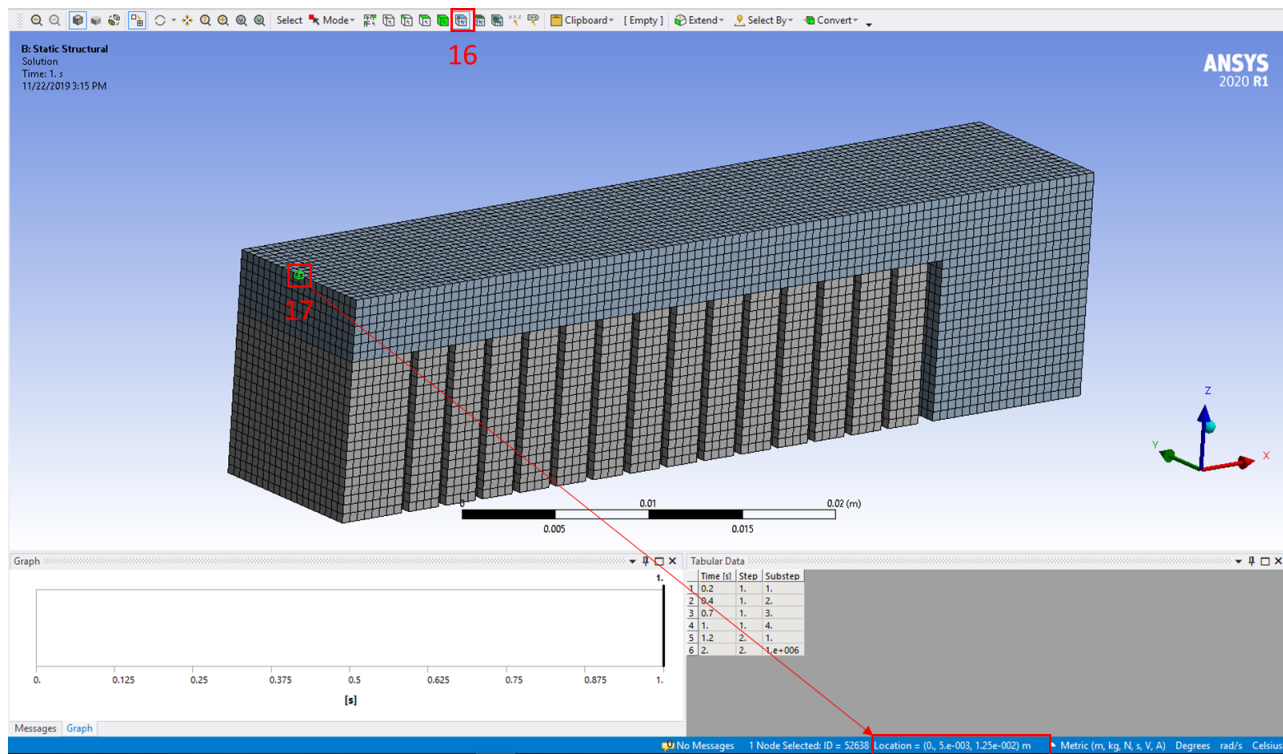
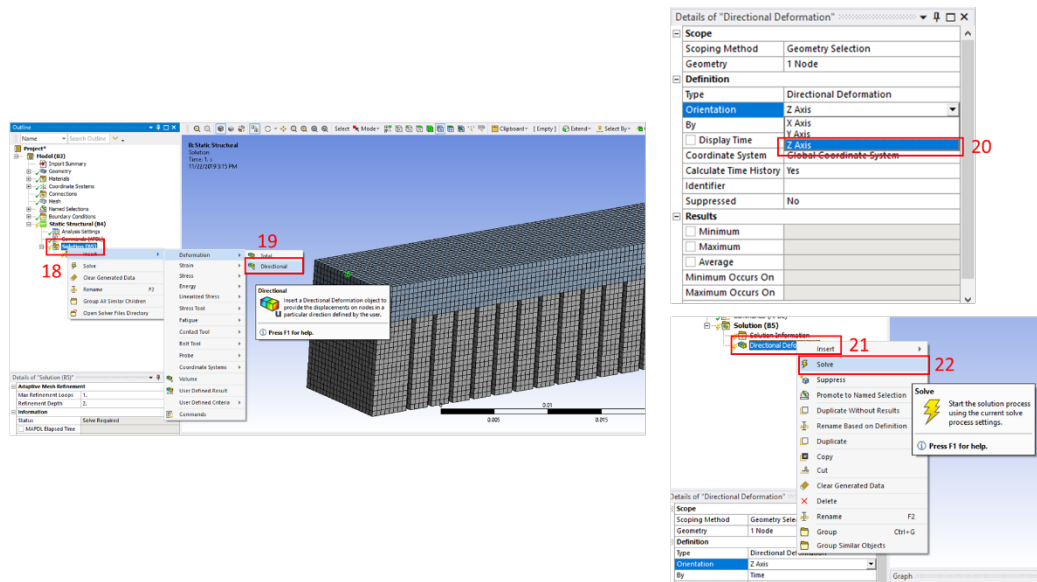
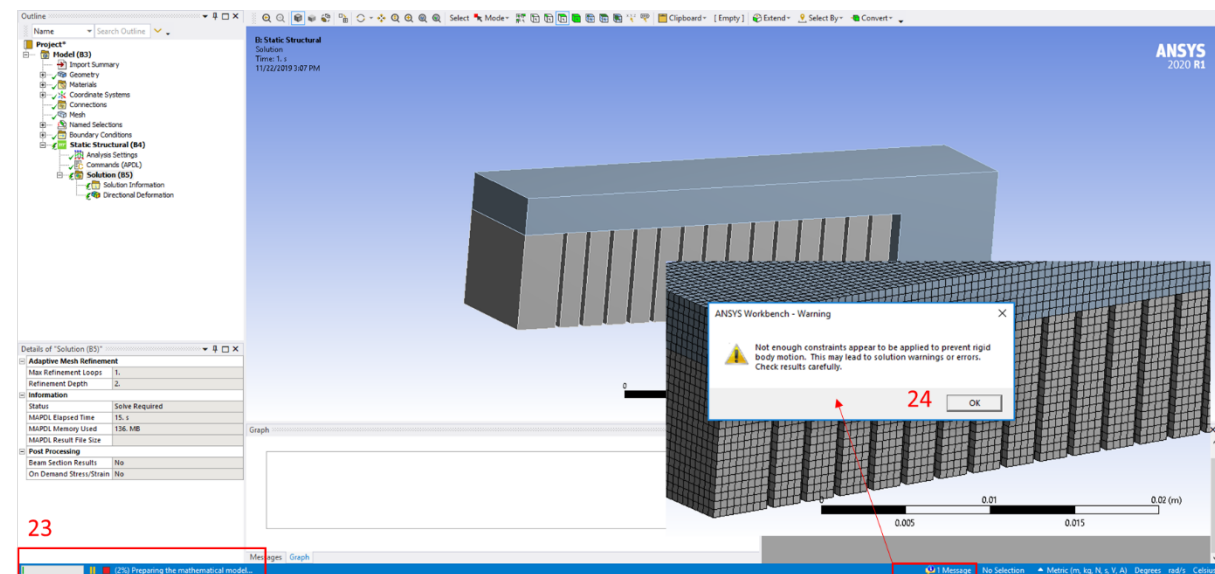


Figure 23: Workbench/Mechanical setup steps 18-22 (p. 24) illustrates the next steps. Right click Solution, and select **Insert > Deformation > Directional** (step 18-19). In the Details of Directional Deformation window, change Orientation to Z Axis (step 20). Then right click Directional Deformation (step 21) and choose Solve (step 22).


Figure 23: Workbench/Mechanical setup steps 18-22

As ANSYS Mechanical is solving the support-only cutoff, you can monitor the process via the progress bar at the bottom (step 23 in [Figure 24: ANSYS Workbench/Mechanical setup steps 23-24 \(p. 24\)](#)). During the solving process, you may notice some pop-up warning messages (like 24 in [Figure 24: ANSYS Workbench/Mechanical setup steps 23-24 \(p. 24\)](#)), which are normal.

Figure 24: ANSYS Workbench/Mechanical setup steps 23-24

Once the Solve process is completed, the distortion value of the selected node can be obtained in step 25 shown in [Figure 25: ANSYS Workbench/Mechanical setup step 25 \(p. 25\)](#). Note that this value only represents the z-axis distortion induced by the support cutoff process. To obtain the total z-axis distortion, you need to add the z-axis on-plate distortion value for measurement B from the Additive Print output [Figure 9: Measurement location B \(p. 12\)](#). The sum of both the Additive Print on-plate distortion and the ANSYS workbench support cutoff distortion is the value that you will use in the [ANSYS Additive Calibration spreadsheet](#) to calculate the Strain Scaling Factor (SSF) and the Anisotropic Strain Coefficients (ASCs), as shown in [Figure 10: Workflow diagram for obtaining distortion simulation values, measurements A and B \(p. 16\)](#).

Figure 25: ANSYS Workbench/Mechanical setup step 25

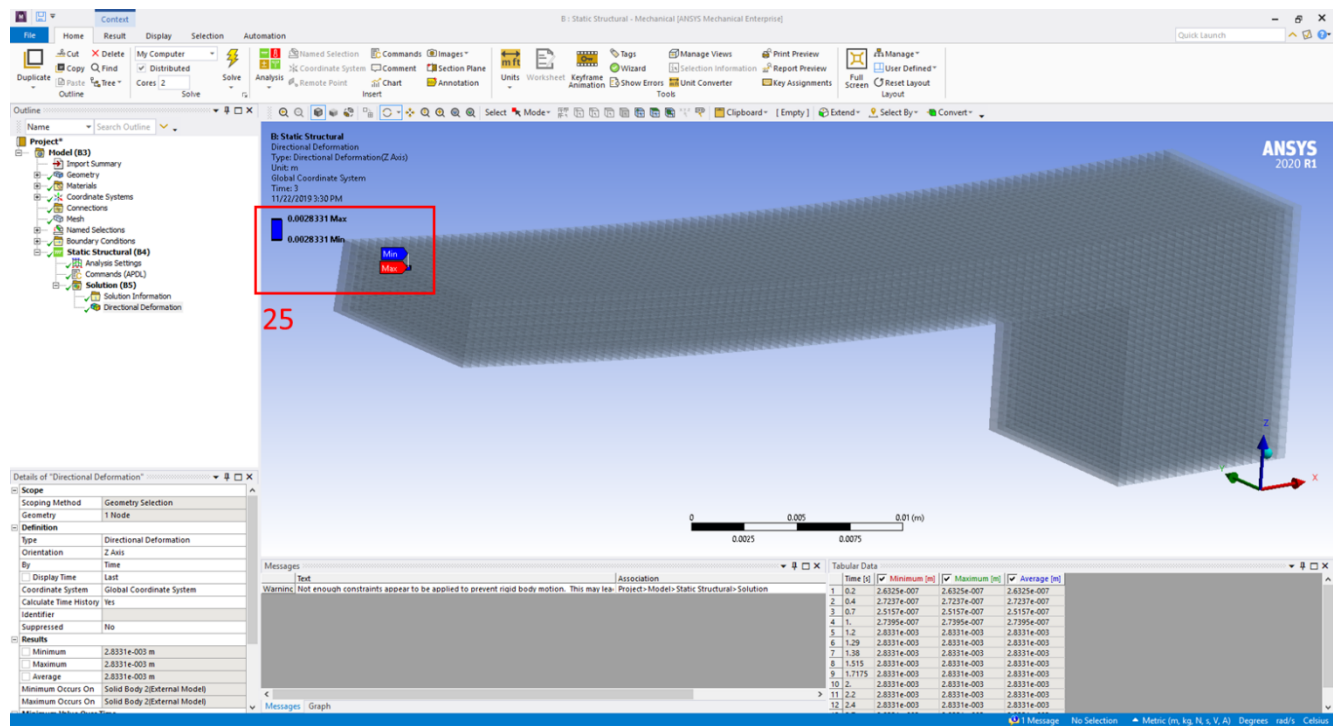

Using the Spreadsheet to Calculate SSF and ASCs

An easy-to-use, customized spreadsheet (.xlsx file) is available to calculate the Strain Scaling Factor (SSF) and the Anisotropic Strain Coefficients (ASCs). (The spreadsheet is [available for download here](#).) Tabs at the bottom of the spreadsheet (**Calibration for AS**, **Calibration for SP**, and **Calibration for TS**) represent the three different simulation types.

ANSYS Additive Calibration Record

Material:
Machine:
Date of Build:
Date of Measurements:
Performed by:
Notes:
Machine Parameters
Layer Thickness (μm):
Starting Layer Angle (°):
Layer Rotation Angle (°):
Hatch Spacing (μm):
Slicing Stripe Width (mm):
Laser Power (W):
Scan speed (mm/sec):
Base Plate Temperature (K):

Use and copy these sheets as needed for calibration tasks

Calibration for AS Calibration for SP Calibration for TS

The sheets are designed so that you enter your own data in the colored-filled cells and the corresponding values for SSF and ASCs will automatically be calculated based on formulas locked into the spreadsheet. Sample values are included in the colored cells just as an example, so the first thing to do is clear the sample data.

SSF and ASCs Calibration for Scan Pattern Simulations

Enter your data here

Geometry Measurements		Distortion (mm)
direction		
⊥ direction		


Extract distortion value at the location of interest from models scanned in || and ⊥ directions

Linear Elastic	Simulation iteration	Simulation number	Distortion (mm)	Simulation settings			New settings			Error%
				SSF	ASC	ASC ⊥	SSF	ASC	ASC ⊥	
	1st	direction		1.00	1.50	0.50				
		⊥ direction								
	2nd	direction								
		⊥ direction								
	3rd	direction								
		⊥ direction								

J2 Plasticity	Simulation iteration	Simulation number	Distortion (mm)	Simulation settings			New settings			Error%
				SSF	ASC	ASC ⊥	SSF	ASC	ASC ⊥	
	1st	direction		1.00	1.50	0.50				
		⊥ direction								
	2nd	direction								
		⊥ direction								
	3rd	direction								
		⊥ direction								
	4th	direction								
		⊥ direction								
	5th	direction								
		⊥ direction								
	6th	direction								
		⊥ direction								
	7th	direction								
		⊥ direction								

1. **Run first calibration set to determine an initial set of factors (for each simulation type and stress mode combination)**

For a chosen combination of simulation type and stress mode, run simulations of the calibration part in Additive Print. Use the spreadsheet to calculate factors.

- a.  Run a simulation of the calibration part using *default SSF and ASCs*.

SSF and ASCs Calibration for Scan Pattern Simulations

Geometry Measurements	Distortion (mm)	
direction	1.342	Extract distortion value at the location of interest from models built with scan patterns 1 and 2 (and ⊥)
⊥ direction	0.892	

Linear Elastic	Simulation iteration	Simulation number		Distortion (mm)	Simulation settings			New settings			Error%
					SSF	ASC	ASC ⊥	SSF	ASC	ASC ⊥	
	1st		direction	3.456	1.00	1.50	0.50	0.43	1.20	0.80	157.5%
			⊥ direction	1.786							100.2%
	2nd		direction								
			⊥ direction								
	3rd		direction								
			⊥ direction								

- b. Calculate new SSF and ASCs using simulation distortion data compared to measured distortion data from the calibration part. (This is done automatically with formulas built into the spreadsheet.)



SSF and ASCs Calibration for Scan Pattern Simulations

Geometry Measurements	Distortion (mm)	
direction	1.342	Extract distortion value at the location of interest from models built with scan patterns 1 and 2 (and ⊥)
⊥ direction	0.892	

Linear Elastic	Simulation iteration	Simulation number		Distortion (mm)	Simulation settings			New settings			Error%
					SSF	ASC	ASC ⊥	SSF	ASC	ASC ⊥	
	1st		direction	3.456	1.00	1.50	0.50	0.43	1.20	0.80	157.5%
			⊥ direction	1.786							100.2%
	2nd		direction	1.678	0.43	1.20	0.80	0.34	1.20	0.80	25.0%
			⊥ direction	1.121							25.7%
	3rd		direction		0.34	1.20	0.80				
			⊥ direction								


- c. Run simulations using calculated SSF and ASCs, and then iterate until the new SSF and ASCs converge to an acceptable level of error between measured and simulated distortion.

SSF and ASCs Calibration for Scan Pattern Simulations


Geometry Measurements	Distortion (mm)		
direction	1.342	Extract distortion value at the location of interest from models built with scan patterns 1 and 2 (and ⊥)	
⊥ direction	0.892		

Linear Elastic	Simulation iteration	Simulation number	direction	Distortion (mm)	Simulation settings			New settings			Error%
					SSF	ASC	ASC ⊥	SSF	ASC	ASC ⊥	
	1st		direction	3.456	1.00	1.50	0.50	0.43	1.20	0.80	157.5%
			⊥ direction	1.786							100.2%
	2nd		direction	1.678	0.43	1.20	0.80	0.34	1.20	0.80	25.0%
			⊥ direction	1.121							25.7%
	3rd		direction	1.36	0.34	1.20	0.80	0.42	1.19	0.81	1.3%
			⊥ direction	0.90							0.7%



2. Run fine-tuning calibration step with a different scan pattern

- a.  Run a simulation of the calibration part using a rotating stripe scan pattern and the *calibrated SSF and ASCs*.

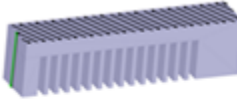
SSF and ASCs Additional Calibration for Scan Pattern Simulations

Geometry Measurements	Distortion (mm)	
Rotating stripe scan pattern (or user-customized)	0.46	Extract distortion value at the location of interest from models built with third scan pattern (rotating stripe)

Linear Elastic	Simulation iteration	Simulation number	direction	Distortion (mm)	Simulation settings			New settings			Error%
					SSF	ASC	ASC ⊥	SSF	ASC	ASC ⊥	
	1st		rotating	0.758	0.34	1.20	0.80	0.21	1.20	0.80	63.4%
	2nd		rotating		0.21	1.20	0.80				

- b.   Run simulations using the newly-calculated SSF and then iterate until the new SSF converges to an acceptable level of error between measured and simulated distortion.

SSF and ASCs Additional Calibration for Scan Pattern Simulations

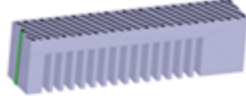Geometry Measurements	Distortion (mm)	
Rotating stripe scan pattern (or user-customized)	0.46	

Extract distortion value at the location of interest from models built with third scan pattern (rotating stripe)

Linear Elastic	Simulation iteration	Simulation number	direction	Distortion (mm)	Simulation settings			New settings			Error%
					SSF	ASC	ASC ⊥	SSF	ASC	ASC ⊥	
	1st		rotating	0.758	0.34	1.20	0.80	0.21	1.20	0.80	63.4%
	2nd		rotating	0.47	0.21	1.20	0.80	0.21	1.20	0.80	0.2%

- c. Record the final SSF and ASCs in a table such as the one shown in [Table 1: Complete matrix of SSF and ASCs \(p. 3\)](#).

Other Considerations

The distortion values seen in the spreadsheets are for demonstration purposes only. Distortion values will vary based on material, machine, and build parameters.

You will need to copy calibration sheets for other simulations.

If you use both locations A and B (assuming that both values are useful and measurable), use the average value of SSF and ASCs obtained from the spreadsheet after the simulations. Therefore:

$$SSF_{cantilever_beam} = (SSF_A + SSF_B) / 2$$

$$ASC_{cantilever_beam||} = (ASC_{A||} + SSF_{B||}) / 2$$

$$ASC_{cantilever_beam\perp} = (ASC_{A\perp} + SSF_{B\perp}) / 2$$

Saving Your Final Results as Custom Materials

The calibration process is complete when you have obtained values for SSF and ASCs that are within an acceptable level of error between measured and simulated distortion. Because the goals of every company and the design of every manufactured part are unique, it is up to you to decide what is an acceptable level of error. Record the final values in the Results Summary sheet in the spreadsheet. (The Results Summary sheet is the same as Table 1 shown in this guide.) Then use those new values of SSF and ASCs for all your simulations in Additive Print for that machine and material.

Within Additive Print, we recommend you save the final SSF and ASCs by creating customized materials for each material/simulation type/stress mode combination.

In the Materials library, select your material and then click Customize. This brings up an edit panel where you can change the SSF and ASC values to the final calibrated values. Then be sure to select the appropriate custom material when performing future simulations.

ANSYS

Dashboard

Parts

Build Files

Materials

Customize Material

Details

Name

IN718 - SP - LE

Description

Use for Scan Pattern simulations with linear elastic stress mode.
Includes new values of SSF and ASCs after calibration process.

Details

Powder Absorptivity	0.76
Solid Absorptivity	0.47
Thermal Expansion Coefficient (K^{-1})	0.0000128
Elastic Modulus (GPa)	211
Poisson Ratio	0.3
Material Yield Strength (MPa)	1040
Hardening Factor	0.0048
Support Yield Strength Ratio	0.4375
Strain Scaling Factor	1.44
Anisotropic Strain Coefficients ()	1.22
Anisotropic Strain Coefficients (\perp)	0.78
Anisotropic Strain Coefficients (Z)	1

Save

Cancel

Appendix A. Equations for Calculating SSF and ASCs

The equations used in the [ANSYS-provided spreadsheet \(p. 27\)](#) for calculating the Strain Scaling Factor (SSF) and Anisotropic Strain Coefficients (ASCs) are shown here for reference.

The following SSF and ASC equation topics are available:

[Nomenclature \(p. 35\)](#)

[Linear Elastic Stress Mode Calculations \(p. 35\)](#)

[Plasticity Stress Mode Calculations \(p. 36\)](#)

For an overview of the calculation process, see [Process Flow for the SSF and ASCs Calculations \(p. 39\)](#).

Nomenclature

The equations in this appendix use the following standard nomenclature:

Table 2: Variables

Variable	Meaning
δe	Experimental distortion
δs	Simulation distortion
r	Ratio

Table 3: Subscripts

Subscript	Meaning
$ $	Parallel to the scan direction
\perp	Perpendicular to the scan direction
$n-1$	Setting before the most recent iteration
n	Setting of the most recent iteration
$n+1$	Setting for the next iteration
$0, 1, 2, \dots$	iteration 1, iteration 2, iteration 3, ...
m	Modified version

Linear Elastic Stress Mode Calculations

Assumed Strain SSF

$$SSF_{new} = \frac{\delta e}{\delta s} \cdot SSF_{old}$$

Scan Pattern / Thermal Strain SSF

$$SSF_{new} = \frac{\delta e_{||} + \delta e_{\perp}}{\delta s_{||} + \delta s_{\perp}} \cdot SSF_{old}$$

Scan Pattern / Thermal Strain ASCs

$$ASC_{||} = \frac{2}{\left(1 + \frac{\delta e_{\perp}}{\delta e_{||}}\right)}$$

$$ASC_{\perp} = 2 - ASC_{||}$$

Plasticity Stress Mode Calculations

Follow these steps to perform the plasticity stress mode calculations:

Step 1: Set the First Iteration of Simulations

Set the first iteration of simulations using these defaults:

- Assumed Strain mode: $SSF_0 = 1$
- Scan Pattern / Thermal Strain mode: $SSF_0 = 1$, $ASC_{||0} = 1.5$, and $ASC_{\perp0} = 0.5$

For Assumed Strain mode, extract target distortion value δs_0 .

For Scan Pattern / Thermal Strain mode, extract target distortion value $\delta s_{0||}$ from one simulation, and $\delta s_{0\perp}$ from a second simulation.

Step 2: Calculate the New SSF and ASCs

Calculate the new SSF and ASCs after the first iteration:

Assumed Strain

$$SSF_1 = (\delta e / \delta s_0) SSF_0$$

Scan Pattern / Thermal Strain

Calculate the average value of distortion in the parallel and perpendicular directions after the first distortion:

$$avg(\delta) = \frac{\delta_{||} + \delta_{\perp}}{2}$$

Calculate SSF and ASC in the second iteration by:

$$SSF_1 = SSF_0 \frac{avg(\delta e)}{avg(\delta s_0)}$$

$$ASC_{||1} = (2 - ASC_{||0}) \left(\frac{\delta e_{||} + \delta s_{\perp}}{\delta e_{\perp} + \delta s_{||}} - 1 \right) + ASC_{||0}$$

Step 3: Determine Whether the New SSF Is < 1 or ≥ 1

If the suggested new SSF_1 is less than 1, set $SSF_{1m} = 0.002$ and run the simulation to extract δs_1 .

If the suggested new SSF_1 is greater than or equal to 1, set $SSF_{1m} = SSF_1$ and run the simulation to extract δs_1 .

Step 4: Perform Linear Interpolation Between Iterations 1 and 2

Perform linear interpolation between the iteration 1 (default value) and iteration 2 to extract SSF_2 , ASC_2 , and the values for the subsequent iterations.

For $SSF_{1m} = 0.002$ ($SSF_1 < 1$)

1. $SSF_2 = \frac{(\delta e - \delta s_0)(SSF_1 - SSF_0)}{(\delta s_1 - \delta s_0)} + SSF_0$
2. Determine whether $avg(\delta s_1) < avg(\delta e) < avg(\delta s_2)$.

If Yes:

$$SSF_{n+1} = \frac{(\delta e - \delta s_1)(SSF_n - SSF_1)}{(\delta s_1 - \delta s_0)} + SSF_1, \text{ where } n \geq 2$$

If No:

$$SSF_{n+1} = \frac{(\delta e - \delta s_0)(SSF_n - SSF_0)}{(\delta s_n - \delta s_0)} + SSF_0, \text{ where } n \geq 2$$

For $SSF_{1m} = SSF_1$ ($SSF_1 \geq 1$)

$$SSF_{n+1} = \frac{(\delta e - \delta s_{n-1})(SSF_n - SSF_{n-1})}{(\delta s_n - \delta s_{n-1})} + SSF_{n-1}, \text{ where } n \geq 1$$

For Both Cases

$$r = \frac{\delta s_{||}}{\delta_{\perp}} \quad r_e = \frac{\delta e_{||}}{\delta e_{\perp}}$$

$$ASC_{||n+1} = \frac{(r_e - r_{n-1})(ASC_{||n} - ASC_{||n-1})}{(r_n - r_{n-1})} + ASC_{||n-1}$$

$$ASC_{\perp n+1} = 2 - ASC_{||n+1}$$

Step 5: Calculate the Relative Error

Calculate the relative error $\frac{|\delta s_{||n} - \delta e_{||}|}{\delta e_{||}}$, where $n \geq 1$ and $\frac{|\delta s_{\perp n} - \delta e_{\perp}|}{\delta e_{\perp}}$, where $n \geq 1$.

Determine whether the error exceeds your tolerance.

If Yes:

End the calibration program.

If No:

Go back to the iteration.

Process Flow for the SSF and ASCs Calculations

